## WINDSOCK (3)

## Sewing Skills You Will Learn


- 1. Cut or tear sock and streamers.
- 2. Stitch 1/4" and 1/2" seam allowances.
- 3. Trim corners.
- 4. Make a casing.
- 5. Zigzag seam allowance.
- 6. Topstitch.
- 7. Press.


## Supplies Needed:


- 5/8" yd. nylon ripstop or light-weight cotton percale.
- Pieces of assorted color fabrics for 9 streamers (6 1/2" wide x 21" long).


Matching thread.

- 2 yards nylon fishing line cord.
- Lock-Snap Swivel (where fishing line and supplies are sold).
- 8" diameter embroidery hoop with screw closing.
- \*Note if using nylon ripstop, use a warm iron only.
- Step 1. If using cotton fabric, prewash it first.
- Step 2. Straighten fabric.
- Step 3. Cut or tear fabric 28" wide x 18" long. This is the sock. Cut or tear assorted color fabrics 21" long x 6 1/2" wide for 9 streamers.
- Step 3A. *Optional* Applique a design on the center of sock.
- Step 4. Streamers Fold right sides together, stitch 1/4" seam allowance on one long and one short side, leaving one short end open. Trim corners, press seam open. Turn, poke out corners, press.



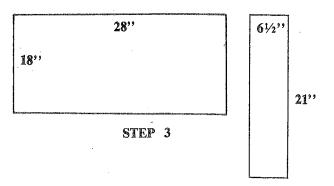


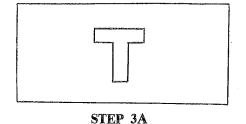





STEP 4

- Step 5. Pin or baste the 9 streamers to lower edge of sock right sides together, overlapping or butting the streamers to fit within width of sock allowing a 1/2" seam allowance on both ends. See diagram. Stitch streamers to sock with a 1/2" seam allowance. Zigzag raw edges of seam allowance together. Press seam up toward the sock. From right side topstitch 1/4" from bottom edge.
- Step 6. Join lengthwise seam of sock using a 1/2" seam allowance. Stitch down 1 3/4" from top, backstitch. Leave a 1" opening. Stitch rest of seam. Keep streamers free from seam allowance. Press seam open. Zigzag raw edges of seam allowance to keep fabric from raveling.
- Step 7. Make a 1" casing at top of sock. Turn raw edge under 1/2" to wrong side, pin and press. Turn fabric down 1", pin in place. Stitch close to edge of hem leaving a 1 1/4" opening for hoop.
- Step 8. Remove screw from hoop and slip outer hoop into the casing. Replace screw which is on outside of sock. Handstitch opening closed.
- Step 9. Make a bridle by cutting three 18'' lengths of nylon cord. Mark inner hoop into thirds. Tie nylon cord securely at each mark. Place inner hoop inside outer hoop.
- Step 10. Pull the three ends of cord together and attach to the lock-snap swivel for free movement of the windsock. Happy flying!

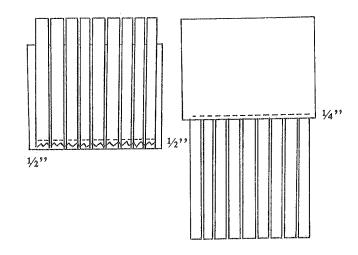

STEP 5

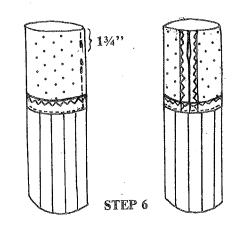

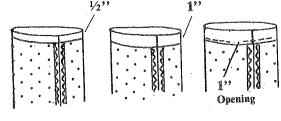

STEP 7

